 


GIO-880 **GIO-881** **GIO-882** **GIO-883**

 
User manual for interactive toy device
with music-box and night light

GIO friends

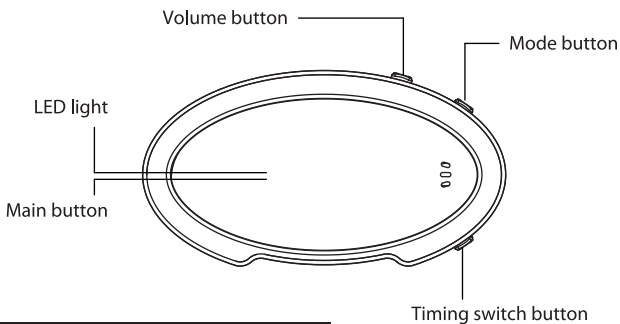


BUTTON FUNCTION

• Volume button

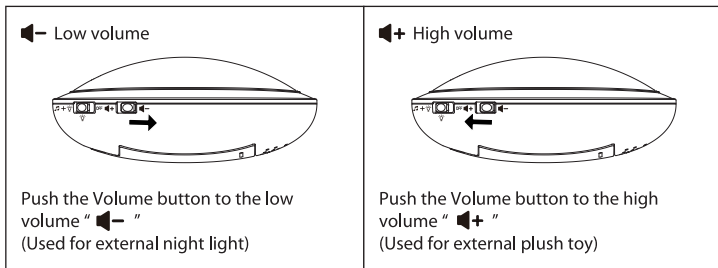


• Mode button

 Push the Mode button to "OFF", the music box in Turn off status; Push the Mode button to "💡", the music box in Night light mode (with warm yellow light); Push the Mode button to "🎵 + 🌙", the music box in Placate mode (with music and soft gradual light).




● Timing switch button

 Push the Timing switch button to “🕒”, the Night light music box will auto turn off after 10 mins. Push the Timing switch button to “🕒”, the Night light music box will auto turn off after 20 mins. Push the Timing switch button to “🕒”, the Night light music box will auto turn off after 40 mins.



● Main button

 
1. When the Night light music box in Placate mode “🎵 + 💡”, long press the Main button for Turning ON/OFF. Long press to turn it on, it will come into Random play music and gradual light mode in first time. Short press again for changing music. It can turn OFF by timer, press it in midway will re-timing.
2. When the Night light music box in Night light mode “💡”, long press the Main button for Turning ON/OFF the Night light (Warm yellow light). It can turn OFF by timer, press it in midway will re-timing.

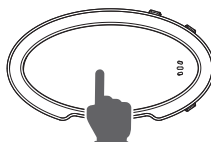

BATTERY

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage.

 - Do not mix old and new batteries or batteries of different types: alkaine standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries from the product. Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries are used, they are only to be charged under adult supervision.

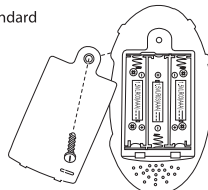

Used 3 x 1.5 V AAA battery

FUNCTIONALITY OF AN INTERACTIVE TOY DEVICE WITH MUSIC-BOX AND NIGHT LIGHT:

1. The music box included 10 soothing soft music
2. Light *Night light mode: with warm yellow light
* Placate mode: with gradual light (war yellon-green-blue)

innoGIO

Produced in China for INNOGIO sp. z o.o.
Ostródzka street 74H, 03-289 Warsaw, Poland
www.innogio.com



 @innoGIO.official  @innogio_com