




GIO warm Fast Duo

Double bottle warmer and sterilizer

USER MANUAL

Read this user manual before using your double bottle warmer & sterilizer, and keep the user manual for future reference.

PRODUCT DIAGRAM 01

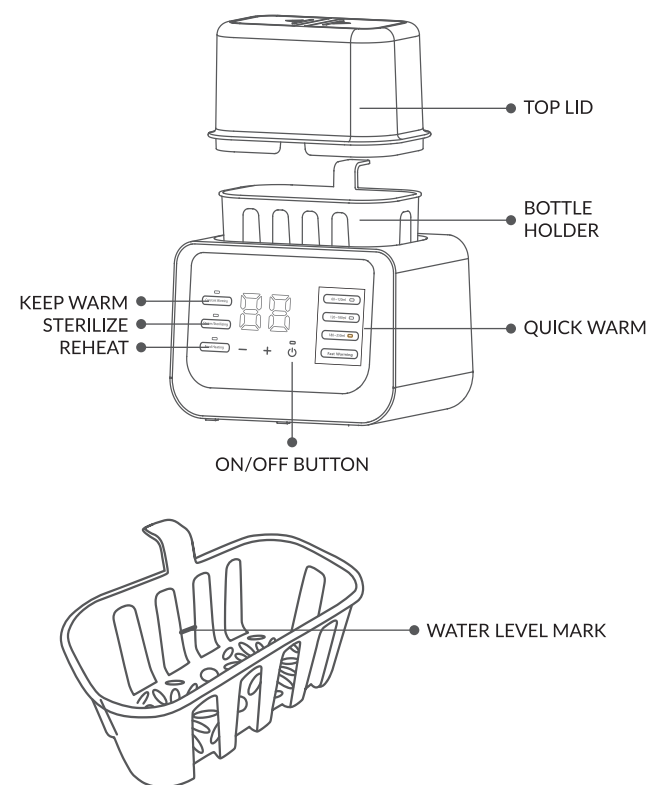

SPECIFICATION 02

Rated voltage: AC 220-240V
 Rated power: 280W
 Temperature control range: 37°C-90°C
 Rated frequency: 50/60 Hz
 Top lid size: 17 x 8,86 x 10,5 cm
 Warming area size: 16 x 9,5 x 9 cm
 Total size (lid included): 20 x 13,49 x 22,3 cm
 Material: Polypropylene, stainless steel and electrical elements (BPA Free)

WARNING

ALWAYS shake the bottle well and test the temperature of its content before feeding your child.
 ALWAYS unplug when the appliance is not in use or is about to be cleaned.
 DO NOT immerse the appliance in water.
 DO NOT use solvents or abrasive cleaners to clean the appliance.

NOTE

Due to the fact that there is a difference in thermal conductivity depending on the bottle material (plastic, glass, etc), height, initial environment (water temperature), and finally the milk temperature under the same settings, a warmer material will keep the water temperature outside the bottle higher and then transfer the heat to the bottle, allowing the milk in the bottle to reach the desired temperature quicker. Therefore, it is normal for the temperature you have selected to differ slightly from the actual milk temperature.

IMPORTANT SAFEGUARDS 03

Read all instructions before using the appliance.
 Do not place your hand in or around the warming chamber during heating.
 To prevent injury, always shake the bottle well and test the temperature of its content (milk or baby food) before feeding your child.
 Do not immerse the cord in water or any other liquid to prevent electric shock.
 Close supervision is necessary when the appliance is used near children.
 Do not use the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
 Do not let the cord hang over the edge of a table or a countertop, or touch hot surfaces.
 Do not place the appliance on or near a hot gas or electric burner.
 Be extremely cautious moving the appliance containing hot a liquid.
 This appliance does not require preheating.
 ALWAYS unplug the appliance from the outlet when it is not in use, before attaching or taking off parts, and before cleaning.
 Clean the appliance with water before use.
 For household use only. Not suitable for outdoor use.
 Save this instruction manual for future reference.



HOW TO USE - QUICKWARM 04

- Place the warmer on a flat surface.
- Pour clean water into the warmer to the level indicated by the water level mark on the holder.
- Place the bottle with frozen milk into the holder, then cover the lid of the warmer.
- Touch the On/Off button and repeatedly touch the "Quick Warm" button to choose one of the three options (60-120 ml / 120-180 ml / 180-250 ml) depending on the milk volume. The machine starts working after 3 seconds and the LCD screen will display the heating time.

NOTE:

- Please check the milk temperature to avoid scalding the baby.
- Do not heat for too long as the milk will become too hot and the nutrition values of the milk might be damaged.

	"Quick Warm" time reference		
Milk Volume	60-120 ml	120-180 ml	180-250 ml
Glass Bottle	4-6.5 mins	6.5-7.5 mins	7.5-9.5 mins
Plastic Bottle	6-8 mins	8-9.5 mins	9.5-10.5 mins
Silica Gel Bottle	8.5-11.5 mins	11.5-15 mins	15-17.5 mins

The data above is based on the initial milk temperature of 3-7°C.
Data is provided for reference only.

KEEP WARM 05



Place the bottle warmer on a flat surface.
 Pour clean water into the warmer to the level indicated by the water level mark on the holder.
 Place the bottle with frozen milk into the holder, then cover the lid of the warmer.
 Touch the On/Off button, then touch the "Keep Warm" button.
 Select the temperature by touching the "+" or "-" button.
 The machine starts operating after 3 seconds. The LCD screen will display the real-time water temperature. You can see the temperature on the LCD screen increase or decrease in accordance with your selection.

NOTE:

Before feeding, shake the milk well and check if the temperature is suitable. The adjustable temperature range is 37°-60°C.
 In this mode, the machine will stop working automatically after 24 hours.
 A difference between the display temperature and the actual temperature of up to 3 degrees is normal.

STERILIZE 06



- Place the bottle warmer on a flat surface.
- Pour 50-70 ml of clean water into the warmer.
- Place the bottle you wish to sterilize into the holder, then cover the lid of the warmer.
- Touch the On/Off button, then touch the "Sterilize" button.
- When the machine stops operating, the sterilization process is complete. -The waiting time is approx. 12-20 minutes.

NOTE:

- Please make sure that the warmer is clean before sterilization.
- Be careful not to be scalded while taking off the lid of the warmer and taking out the milk bottle after sterilisation.

REHEAT 07



Place the bottle warmer on a flat surface.
 Pour clean water into the warmer to the level indicated by the water level mark on the holder.
 Place the bottle with food into the holder, the cover the lid of the warmer.
 Touch the On/Off button, then touch the "Reheat" button.
 Select the desired temperature by touching "+" or "-" button.
 The machine starts operating after 3 seconds. The LCD screen will display the real-time water temperature. You can see the temperature on the LCD screen increase or decrease in accordance with your selection.

NOTE:

The temperature control range is 60°-90°C.
 Before feeding, please make sure the food temperature is suitable.
 The machine will stop operating automatically after 6 hours of reheating food.

innoGIO

INNOGIO sp. z o.o.

Ostródzka street 74H, 03-289 Warsaw, Poland, www.innogio.com

