

GIO perfect Hair

2 in 1 streghtening and protective hair dryer & straightener



USER MANUAL

GETTING STARTED

Unlock

Slide the lock button downward to open the straightener's arms.



LCD Screen

Displays airflow and temperature settings.

Temperature Control

Five precise temperature options for wet or dry styling, plus an optional boost mode.

Airflow Control

Two speed settings: low flow and high flow.

Cool Mode

Use cool mode to set your style and help it last longer.

Mode Select

Choose between wet or dry styling modes.


Power On/ Standby

Tension Bars

Help control and add tension to the hair within the arms.


Diffusers

Gently diffuse airflow when close to the scalp for comfortable styling.

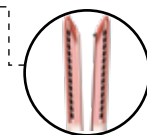

Lock Button

Slide the button to lock or unlock the arms.

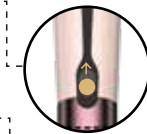

Filter

Removable filter for easy cleaning.

USING YOUR STRAIGHTENER



Your straightener is designed to be used with towel-dried hair — not dripping wet hair. Once towel-dried, detangle your hair with a brush or comb.

Straightening from wet


Before straightening your hair, dry your roots with the arms shut or your straightener closed. You can straighten your hair with the arms locked or by simply holding them closed.



For the best results, use maximum airflow and a higher temperature. Direct the airflow toward your roots.

Unlock the arms and press the Mode Select button to set your straightener to Wet mode.

You can adjust the temperature based on your hair type and styling preferences. Use lower temperatures for finer hair and higher temperatures for thicker hair.

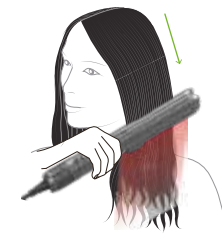

Hold the straightener to direct airflow downwards. Start at the roots and slowly move to the ends. Repeat until each section is dry.


Adjust airflow and temperature as needed throughout the process.

Refresh from dry

Use dry mode to refresh and restyle your hair.

Unlock the arms and press the mode select button to set your straightener to dry mode.


In dry mode, your straightener offers multiple temperature options and an optional boost function for enhanced performance.

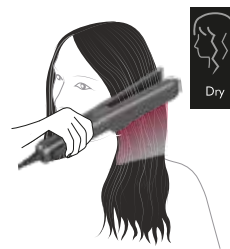

Cool mode

Use Cool mode to set your style.

Hold your straightener with the arms shut, and direct the airflow down the hair section to smooth and set.

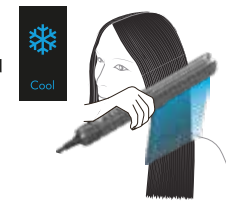


Adjusting the temperature

Press the Temperature Control button to adjust the setting based on your hair type and styling preference.




Boost

Select Boost when styling dry hair for an extra shot of heat.

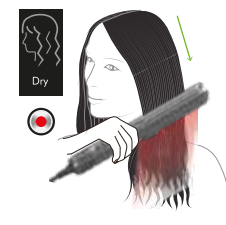


Adjusting the airflow

Press the Airflow button to toggle between low and high airflow settings.

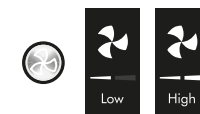

Idle mode

Between passes, your straightener will automatically enter Idle mode. Airflow will reduce, then increase again as soon as you close the arms.

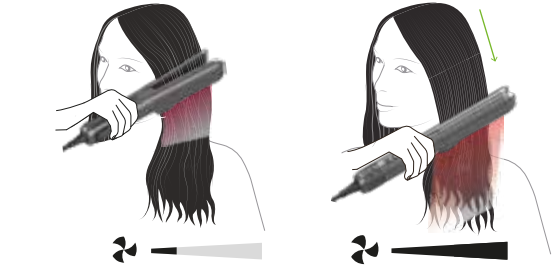

Auto pause

To save energy, your straightener will auto pause when left open for three seconds. It will reactivate automatically when you pick it up.

Stand-by

To conserve power, your straightener will enter Stand-by mode if left unattended with the arms open for more than five minutes. Press the Power button to reactivate.



Idle mode may cause lights to dim



High-power appliances, such as your GIOperfect Hair straightener, may cause lights in your home to flicker or dim. This occurs when the appliance briefly draws more current, reducing power to other devices on the same circuit.

If light dimming occurs:
Try plugging the appliance into a different outlet or circuit. A qualified electrician can help identify suitable outlets.

CLEANING THE DEVICE

Your straightener has been precisely engineered. To maintain outstanding styling performance, it must be kept free from hair product residue and debris. Regular maintenance will help optimize its performance.


Cleaning the filter

Unplug your straightener and allow it to cool completely before cleaning the filter.

Hold the body of your straightener with one hand and the perforated filter unit with the other.

Pull down on the filter unit to release it from the machine and onto the cable.

Gently pull the filter open and slide it off the cable.

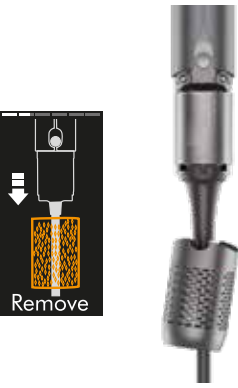

SPECIFICATION

Product name: GIOperfect Hair,
Model: GIO-740
Power Supply: 220-240V-50/60 Hz 1500W
Temperature Setting:
• Wet mode: 80°C / 110°C / 140°C
• Dry mode: 120°C / 140°C + BOOST
Airflow Speed Settings: Low & High
Mode Settings: Wet, Dry

- Scan the QR code to download the manual
- Zeskanuj kod QR, aby pobrać instrukcję
- Scannen Sie den QR-Code, um das Handbuch herunterzuladen
- Scannez le code QR pour télécharger le manuel
- Escanee el código QR para descargar el manual
- Digitalize o código QR para descarregar o manual
- Scansiona il codice QR per scaricare il manuale
- Scan de QR-code om de handleiding te downloaden
- Скануйте QR-код, щоб завантажити інструкцію
- Naskenujte QR kód a stáhněte si návod k použití
- Naskenujte QR kód a stiahnite si príručku
- Scanează codul QR pentru a descărca manualul
- Nuskaitykite QR kodą, kad atsisiųstumėte instrukciją
- Nolasiet QR kodu, lai lejupielādētu rokasgrāmatu
- Lae juhend alla, skannides QR-koodi
- A kézikönyv letöltéséhez olvassa be a QR-kódot.
- لي ليدل لي زنتل دة عيرس لال قباچت سالا زمر ح س م ا



innogIO

Manufactured in China for **INNOGIO GLOBAL** sp. z o.o.
Ostródzka street 74H, 03-289 Warsaw, Poland
www.innogio.com

@innogIO.official @innogio_com