



Scan the QR code to download the manual



Zeskanuj kod QR, aby pobrać instrukcję



Scannen Sie den QR-Code, um das Handbuch herunterzuladen



Scannez le code QR pour télécharger le manuel



Escanee el código QR para descargar el manual



Digitalize o código QR para descarregar o manual



Scansiona il codice QR per scaricare il manuale



Scan de QR-code om de handleiding te downloaden



Скануйте QR-код, щоб завантажити інструкцію



Naskenujte QR kód a stáhněte si návod k použití



Naskenujte QR kód a stiahnite si príručku



Scanează codul QR pentru a descărca manualul



Nuskaitykite QR kodą, kad atsisiųstumėte instrukciją



Nolasiet QR kodu, lai lejupielādētu rokasgrāmatu



Lae juhend alla, skannides QR-koodi



A kézikönyv letöltéséhez olvassa be a QR-kódot.



ليدلل الكود QR لتحميل دليل المستخدم



innogIO

Manufactured in China

for **INNIOGIO GLOBAL** sp. z o.o.

Ostródzka street 74H, 03-289 Warsaw, Poland

www.innogio.com



@innogIO.official




@innogio_com

EN

GIO-160

innogIO

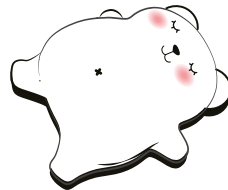

GIO Pudding
Silicone Night Light

USER MANUAL

ON-OFF

Slide to ON for 30% brightness/ snoring
Slide to OFF to turn off

Volume

Upon startup, short presses of the control button will cycle through the available snoring modes.

USB Charge

Red light = charging,
off = fully charged

Timer

Slide the switch to 30' position to
set the timer for 30 minutes

Brightness

After powering on, tap to cycle: 30%
- 60% - 100% - Off

SPECIFICATIONS

Product Name: **GIO pudding**

Model: GIO-160

Rated Voltage: DC 5V

Rated Power: 1.2W-6.0W

Charging Current: 200-600mA

Power Input: DC 5V $\overline{=}$ 1A

Battery Capacity: 1200 mAh

Battery Time: 3-9 h

Charging Time: 4-9 h

Material: ABS/Silicone

Product Size: 164 × 181 × 86.5 mm

Interface: Type-C

INSTRUCTION

1. Switch Indicator (located at the bottom):

ON - Turns the device on

OFF - Turns the device off

30 - Activates 30-minute timer mode

☀ - Tap to adjust brightness

🔊 - Tap to adjust volume

2. Instructions for Use:

When using, push the bottom switch to the ON position. The lamp will turn on at 30% brightness, with the bear's belly breathing movement activated and sound set to 0%. After powering on, briefly press the light button to adjust brightness, cycling through: 30% - 60% - 100% - Off (0%) in this order.

Briefly press the volume button to adjust sound and breathing combinations in the following order:

- 50% sound + belly breathing
- 100% sound + belly breathing
- Sound off + belly breathing off
- Sound off + belly breathing on

The cycle then repeats. To turn the lamp off, push the switch to the OFF position. For a 30-minute timer, push the switch to the 30 position; after 30 minutes, both light and sound will automatically turn off.

